



International Airfoil Adapter Kit

Installation Instructions

Item # EZCIAAK | The **EZ Claw Line Saver International Airfoil Adapter Kit** is designed for International day cab tractors with a cab-mounted airfoil using a C channel profile.



Kit includes:

- (2) 5" x 2.50" L-Shaped Brackets
- (2) 3/8" M Hardware Kit

Recommended Tools for Installation:

- (1) Battery Powered Drill
- (1) 1/4" Drill Bit
- (1) 3/8" Drill Bit
- (1) 9/16" Socket
- (1) 9/16" Open Ended Wrench
- (1) Permanent Marker or Center Punch

Installation Instructions


1



Parts inventory.

Each International Airfoil Adapter Kit includes two brackets and mounting hardware.


2

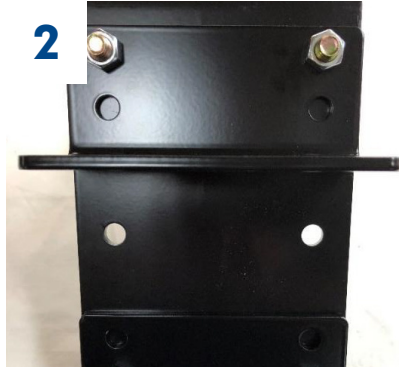

Align Holes.

Mount IAAK adapter brackets to Versa Mount or Versa Mount Short Bracket utilizing supplied hardware as shown.

3

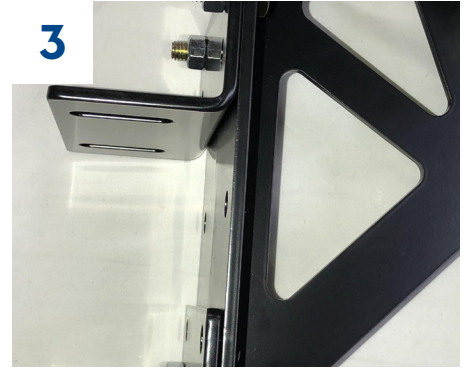

Sub-Assembly.

Once assembled, your adapter should look like the profile above to provide accurate spacing for mounting on the factory-installed C-channel.

4



Remove Factory Bolts.

Remove factory-installed bolts that mount the airfoil to the cab. Mount the bottom of the EZ Claw bracket in the factory-drilled bolt locations utilizing factory bolts.

5



Drill Holes.

Drill holes in top of International C channel for mounting the EZ Claw bracket to the truck. Secure the top of the bracket with provided hardware kit.

6



Install Line Saver.

Mount the EZ Claw Line Saver utilizing the 3/8" mounting hardware supplied with the Line Saver.

6



Attach Hose Assembly.

Using an EZ Claw Sling (EZCS) or Hose & Cable Block (EZCHCH38), attach the EZ Claw Line Saver cable to the hose assembly.