



# EZ Claw Yard Truck Line Saver

## Installation Instructions


Item # EZCYT | The **EZ Claw Line Saver Yard Truck** tensioner is specifically designed for use on yard hostlers. The tensioner is mounted on the side of the cab to keep hoses and lines clear of the rear door and off the cat walk.

### Kit Includes:

- (1) Yard Truck Line Saver
- (1) 3/8" M Hardware Kit
- (1) 3/8" Rivet Nut Kit

### Tools needed for assembly:

- (1) Battery Powered Drill
- (1) 1/4" Drill Bit
- (1) 17/32" Drill Bit
- (1) Rivet Nut Tool (EZCRNIT)
- (1) 9/16" Socket
- (1) Permanent Marker or Center Punch

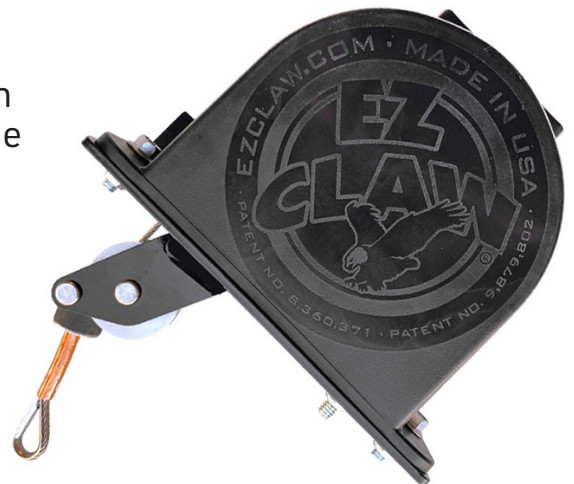

# Installation Instructions

## Notes:

15' straight or 3-in-1 hoses are recommended for use with the EZ Claw Yard Truck Line Saver system.

**1**

**FP0 in-use to come**

### Select Location.

EZ Claw Yard Truck Line Saver should be mounted on the curb side of cab as high as possible without interference.

**2**

**FP0 in-use to come**

### Mark Hole Locations.

Hold the EZ Claw Yard Truck Line Saver in place at a 45-degree angle and mark the two bolt holes, making sure that there are no obstructions inside or outside of the cab.

**3**

**FP0 in-use to come**

### Drill Pilot Holes.

Using a 1/4" bit, carefully drill pilot holes in the center of each mark (being careful not to plunge into insulation, wires, etc).

**4**

**FP0 in-use to come**

### Enlarge Holes.

Drill out the pilot holes using a 17/32" drill bit.

**5**

**FP0 in-use to come**

### Install Rivet Nuts.

Install two rivet nuts using a rivet nut installation tool (EZCRNIT).

**6**

**FP0 in-use to come**

### Tighten Hardware.

Secure EZ Claw Yard Truck Line Saver with two 3/8" bolts.

**7**

**FP0 in-use to come**

**Attach Hose Assembly.**

Using an EZ Claw Sling (EZCS) or Hose & Cable Block (EZCHCH38), attach the EZ Claw Line Saver cable to the hose assembly.