



Heavy Duty Line Saver

Installation Instructions


Item # EZCHD | The **EZ Claw Heavy Duty Line Saver** features tandem 40-lb. tensioners and is designed to handle hydraulic hose setups with more than 2 hydraulic lines or lines larger than 2" in diameter.

Kit Includes:

- (1) Heavy Duty Line Saver System
- (1) 3/8" HD Hardware Kit
- (2) Spring Clips
- (1) Extendable Tieback Link

Recommended Tools for Installation:

- (1) Battery Powered Drill
- (1) 9/16" Open Ended Wrench
- (1) 9/16" Socket

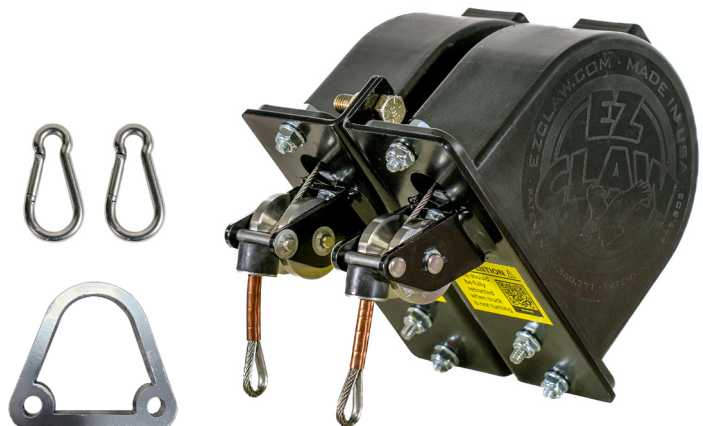

Installation Instructions

Note: The EZ Claw Heavy Duty Line Saver system is not recommended for use on the back of cabs.

1. Mounting Line Saver.

Using the hardware supplied, insert two bolts through the two mounting holes on the Line Saver.

2. Install Bracket.

Place the bolts through the mounting bracket and then through the second Line Saver.

3. Tighten Bolts.

Place the nuts on the bolts and tighten.

4. Connect Carabiner.

Connect the Extended Cable Tieback link to the two EZ Claw Line Savers with (2) supplied spring clips.

5. Connect Clip.

Connect spring clip from one of the EZ Claw Slings (EZCS) through the link.

6. Identify Largest Line.

Starting with largest line to be supported, locate the center of the line and use this as the attachment point to install the EZ Claw Sling around the line. Connect carabiner to the D-ring of the sling. Ensure lines are not in contact with the catwalk, frame or other structure.

7. Attach D-Ring.

Hook carabiner from second sling to the carabiner already installed in Step 5. Install sling around hydraulic line to be supported and attach D-ring to carabiner.

8. Final Step.

Repeat Step 6 for third line and any others that may need to be supported.