




EZ Claw Tandem Tensioner Installation Instructions




! Do not exceed 6 ft. or 72" extension of the EZ Claw tensioner cable.

Determine the tandem slide length of the trailer.

If it is 6 ft. or less proceed to A. if it exceeds 6 ft. proceed to B (on back).



A. Move the Tandem all the way to the FORWARD position.

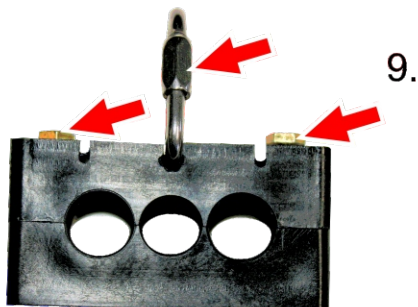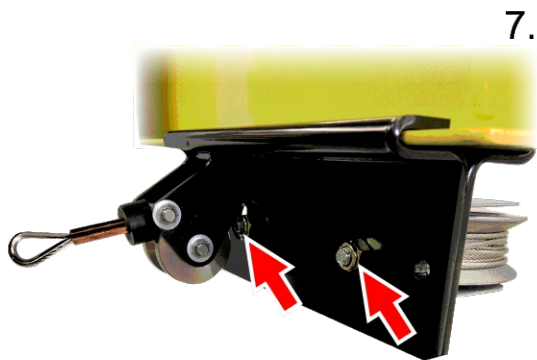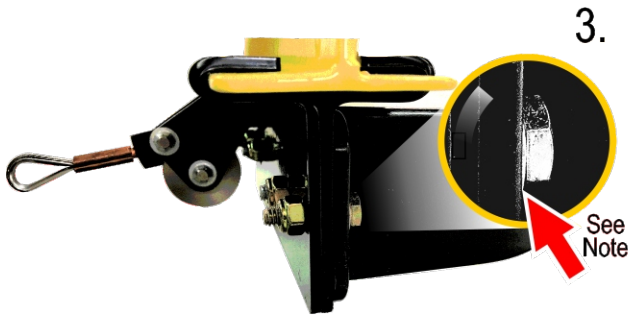

1. Pull the airlines and electrical cord as far forward as possible.

2. Loosely attach the hoses and electrical cord into the EZ Claw Hose & Cable Holder.

3. Remove the four 1/4" nylock nuts and two 1/4-20 X 1" bolts securing the cover.

! **NOTE:** There is a spacer located in the cover left side position. This spacer allows for cover alignment and expansion/contraction. **DO NOT LOSE!**

4. Grasp the EZ Claw Tensioner spread and place onto the cross member I-beam.

! **NOTE:** Make sure the EZ Claw Tensioner is not in the tandem slide path.

5. The two 1/4" tensioner bolts should extend thru the face.


6. Position the EZ Claw Tandem Tensioner onto the cross member beam closest to the arc of the hoses. Slide the EZ Claw Tandem Tensioner on the cross member beam near the center of the arc.

7. Replace and tighten the two tensioner nylock nuts.

! **NOTE:** Do not over tighten fasteners and do not use impact tool.

8. Place the cover, bolts, spacer and nuts onto the tensioner assembly and secure.

! **NOTE:** Do not over tighten the fasteners while securing the cover.

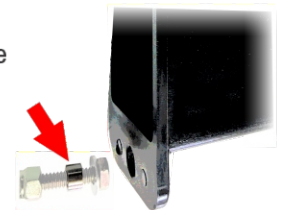

9. Tighten the two EZ Claw Hose & Cable Holder nylock nuts and the Delta Quick Link.

10. Test the System by sliding the Trailer Tandem back and forth a few times making sure the EZ Claw Tandem Tensioner has been installed correctly.


www.ezclaw.com

704-896-8867 Made in the USA.

Copyright © 2018 EZ Claw, Inc.



Before starting **Installation B** move the Trailer Tandem all the way to the **BACK** position.

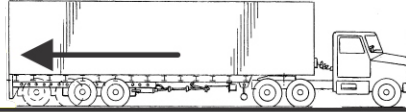

Do not exceed 6' or 72" extension of the EZ Claw tensioner cable.

B. Slide the Tandem all the way to the rear and then slide Tandem 6 ft. forward.

Complete # 1 – 10 as for A (other side of page).

With slide length over 6 ft. you will experience some hose and electrical cord droop when the slider is moved all the way forward.



Aluminum Cross Member shown



Steel Cross Member shown

GUARANTEE OF SAFETY AND WARRANTY:

EZ Claw Tandem Tensioner is NOT a guarantee of safety. The EZ Claw Tandem Tensioner does NOT warrant or guarantee that hose or cable will not fail and / or that tractor and trailer will not come uncoupled due to hose or cable failure. EZ Claw Tandem Tensioner is designed to reduce wear and tear on hose and cable and thus designed to reduce the risk of hose and cable failure or uncoupling due to hose and cable failure. The EZ Claw Tandem Tensioner, utilized along with regular inspection, maintenance and repair program, will decrease the risk of hose and cable failure and uncoupling due to hose and cable failure.

SELLER IS SELLING THE SYSTEM EQUIPMENT TO BUYER AND BUYER IS PURCHASING THE SYSTEM EQUIPMENT "AS-IS". SELLER MAKES NO REPRESENTATION OR WARRANTIES, EXPRESS OR IMPLIED, OF MERCHANTABILITY, FITNESS OR ANY OTHER EXPRESS, IMPLIED OR STATUTORY OR ANY OTHER WARRANTIES OF ANY KIND TO PURCHASER AS TO THE CONDITION OF THE SYSTEM EQUIPMENT. BY EXECUTING THIS AGREEMENT, BUYER ACKNOWLEDGES AND AGREES THAT IT IS PURCHASING THE SYSTEM EQUIPMENT WITHOUT ANY REPRESENTATIONS OR WARRANTIES OF ANY KIND FROM SELLER AS TO THE CONDITION OF THE SYSTEM EQUIPMENT.

www.ezclaw.com

704-896-8867 Made in the USA.

Copyright © 2018 EZ Claw, Inc.